

QuickClean IP68 Keyboard

Waterproof, silicone and sealed - featuring a Clean Lock Key



The QuickClean IP68 Keyboard is a fully washable keyboard designed for clinical use. It's completely sealed in silicone, to withstand frequent disinfection and offers our highest infection control compliance for a keyboard making it perfect in areas such as ICU, Theatres, or any area where the risk of contamination is high. It offers a comfortable typing experience and offers silent typing – useful for areas that are noise sensitive such as at a patient's bedside.

Features and benefits

- IP68 Rating – the keyboard is dust-tight and protected against complete, continuous immersion in water
- Clean Lock Key – pressing for 5 seconds activates cleaning mode
- Rubberised surface provides a comfortable and quiet typing experience
- Fully sealed silicone keyboard that withstands water, alcohol and hospital disinfectants
- Backlit keys provide a visual aid in dark environments or at night (can be turned off)
- Budget-friendly - to offer the highest levels of infection prevention across the whole hospital
- Available with nano silver antibacterial treatment* – which helps further protect against bacteria and viruses

*The ability of nanosilver to prevent the spread of infection is due to the release of silver (Ag⁺) ions from the surface of this material that is capable of destroying compounds that contain sulfur and phosphorus, such as the DNA and proteins present within bacteria, fungi or viruses


Areas of use

With the highest infection control standards, we'd recommend this keyboard for use in areas with a high risk of contamination such as:

- ICU/Critical Care
- Theatres/OR
- A&E/ED
- Sterile Services
- Mortuary



Cleaning Button

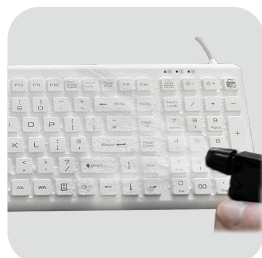


Spray Clean



Wipe Clean




Backlit Keys

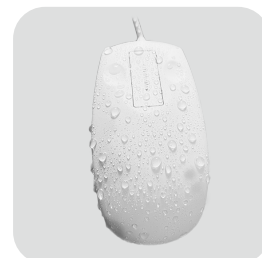

Mouse Option

QuickClean IP68 Keyboard

Waterproof, silicone and sealed - featuring a Clean Lock Key

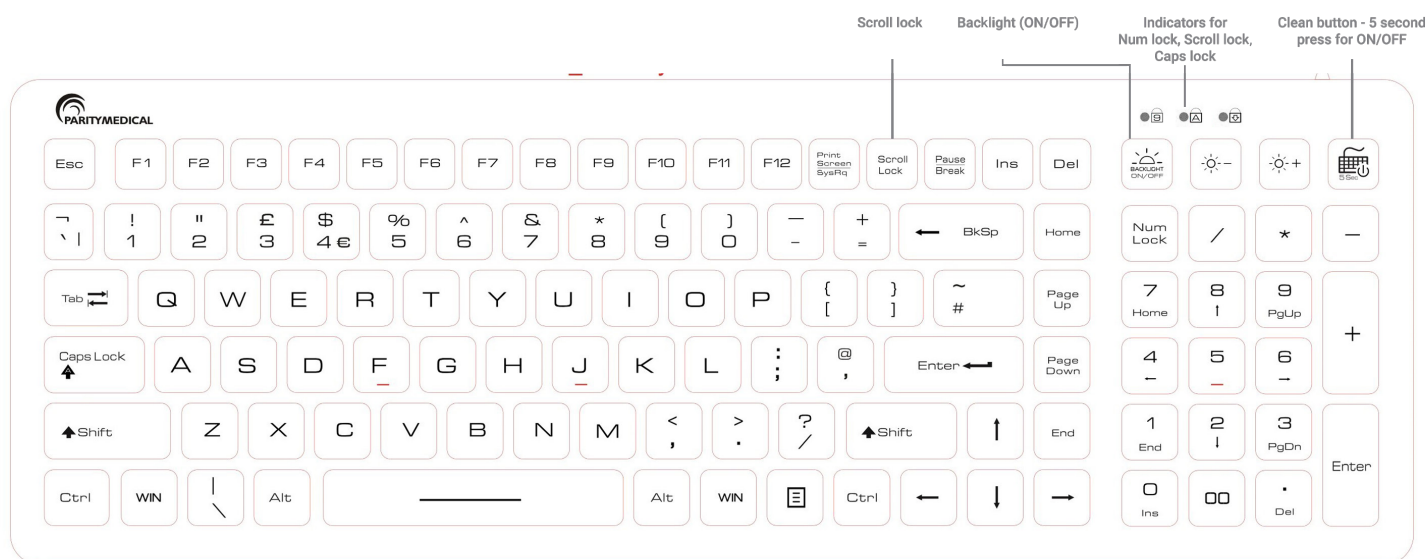

Thin and compact design



Microsoft Teams
Virtual Demonstrations



NHS IT Framework Supplier Link 3:
IT Hardware & Services Contract Reference Numbers
NHS SBS - SBS 10044
NOE CPC - NOEJ.0380.0 / 2020/S 182-440755

Specifications

Connection	Wired
Interface	USB
Dimensions	380 x 130 x 10 mm
Weight	720 g
Cable Length	180 cm
Number Of Keys	110
Platform	Windows, Mac and Linux
Protection Rating	IP68 (Dust-tight and protected against continuous immersion in water)
Lockable	Yes, with a 5-second power key
Colour	White
Backlight	Blue professional backlight Brightness can be changed
Warranty	36 months
Operating Temperature	-0°C to 70°C
Storage Temperature	-40°C to 85°C